

DUAL EXHAUST OUTLET INSTRUCTIONS



Read and follow these instructions along with the standard instructions carefully before installing or using this mud flap.

NOTICE TO INSTALLER: Even if familiar with product, read instructions prior to installation as improvements may be made without notice. Always handle components with care. When done, these instructions must be given to the consumer.

NOTICE TO CONSUMER: Before using this product, read instructions. Save these instructions for future reference.

PREPARATION

TOOLS NEEDED

- Protective eyewear
- Ratchet with 7/16" socket
- Marking pen
- Drill with 5/16" bit
- Cutting tool

NOTE: Hardware appearance and components may vary.

⚠ CAUTION: Always exercise caution when using a cutting tool.

⚠ CAUTION: Always cut away from yourself and others.

⚠ CAUTION: Over tightening hardware may damage components or truck.


⚠ CAUTION: After installation, do not touch exhaust outlet, hot exhaust results in high temperatures on exhaust outlet.

⚠ WARNING: Ensure exhaust fumes are NOT directed or redirected toward any plastic or flaps, including on the vehicle. Additional precautionary measures may need to be taken to divert exhaust.

1: INSTALLING EXHAUST OUTLET

A. With flap installed on truck, on one side align exhaust outlet frame with exhaust stream. Use inside of exhaust outlet frame as a template to outline exhaust hole and mark (4) bolt holes.


Front (closest to cab)

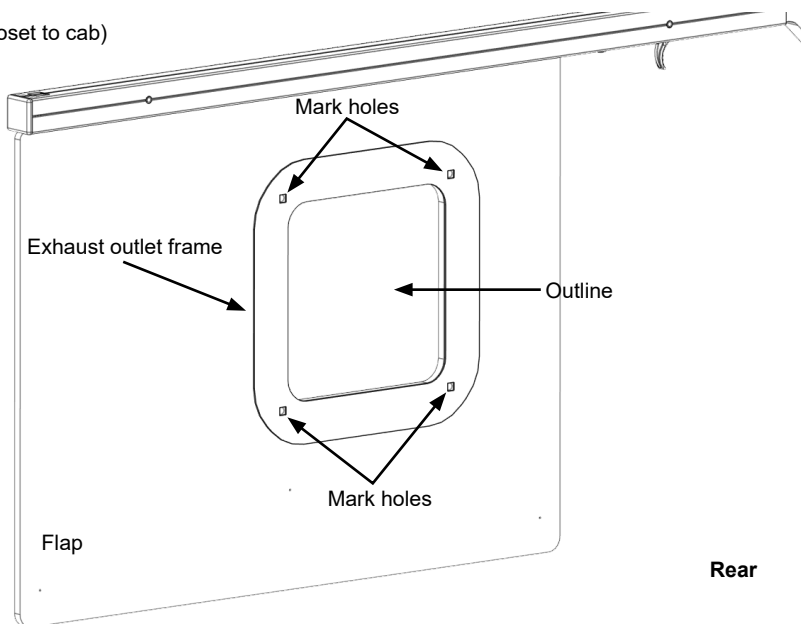

1: INSTALLING EXHAUST OUTLET (Continued)

B. Remove exhaust outlet frame and set aside. Remove flap from truck. Cut outside of outlined exhaust hole, then drill (4) holes with 5/16" bit at marked locations.

IMPORTANT: Hold up exhaust outlet frame to ensure no rubber shows inside ring.

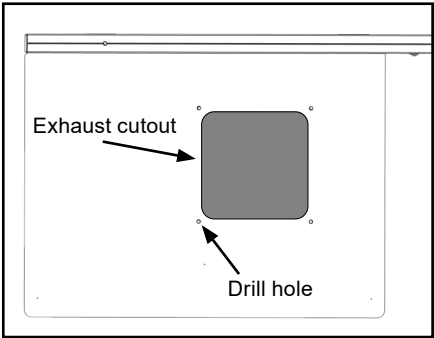

IMPORTANT: Check flap motion range to ensure sufficient clearance between exhaust outlet and bumper.

NOTE: Ensure exhaust outlet plate has full hex rows at top and bottom of exhaust outlet.

C. Insert (4) carriage bolts through exhaust outlet frame and drilled holes in flap with threads facing exhaust. Place (1) serrated flange nut on each carriage bolt and tighten. Place exhaust outlet plate on carriage bolts over first (4) nuts, then secure with (4) serrated flange nuts, fully tighten.

D. Reinstall flap, then repeat for opposite side.

