



SNOW DEFLECTOR INSTALLATION INSTRUCTIONS

Thank you for purchasing SNOWSPORT™ Snow Deflector for your SNOWSPORT® Utility Plow. This product was manufactured using superior quality materials and workmanship. With proper care, your snow deflector will provide years of service and enjoyment.

NOTICE TO INSTALLER: Even if familiar with product, read these instructions prior to installation as improvements may be made without notice. Always handle components with care. If you have questions or problems, call customer service. When done, these instructions must be given to the consumer.

NOTICE TO CONSUMER: Before using this product, read instructions. Save these instructions for future reference.



AGRI-COVER, INC.

Questions? 800-689-6612

agricover.com

PREPARATION

SNOWSPORT™ Snow Deflector works on new and prior SNOWSPORT® Utility Plows.

TOOLS NEEDED

- Ratchet with 9/16" socket
- Drill with 21/64" bit and Phillips head bit
- Tape measure
- Protective eyewear

NOTE: Hardware appearance and components may vary.

▲ CAUTION: Over tightening hardware may damage components.


SAFETY INFORMATION

Always follow safety information in SNOWSPORT® Utility Plow, PRO Utility Blade, Hydraulic Power Angle and Electric Winch installation instructions.

1: ASSEMBLING SNOW DEFLECTOR


A. On one snow deflector channel measure 2" in from each end and make marks on groove. Measure and mark center of snow deflector channel on groove.

B. Repeat for opposite half.

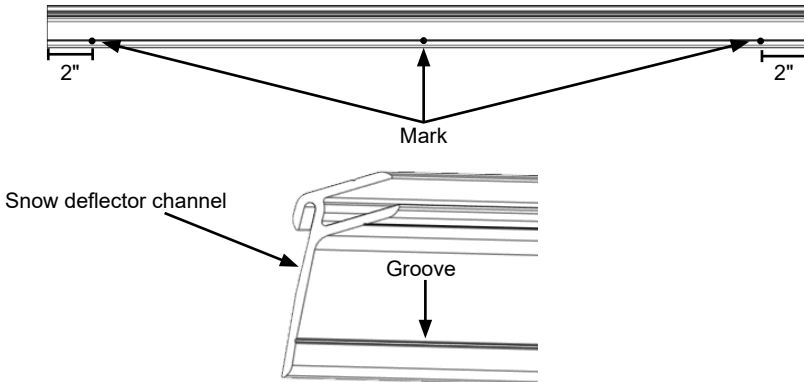

1: ASSEMBLING SNOW DEFLECTOR (Continued)


C. Place one snow deflector channel on lip of aluminum blade, aligning end with edge of blade or edge of box end if present.

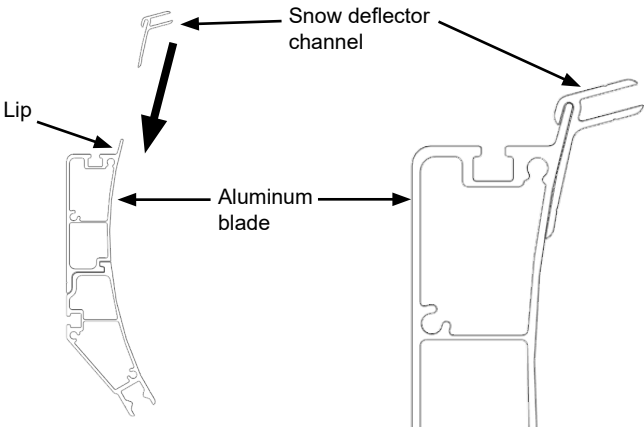

D. Drill (3) 21/64" holes through snow deflector channel and front layer of aluminum blade at marked locations.

E. Secure with (3) 3/8" x 1" self-threading flange bolts.

F. Repeat Steps 2C-E for opposite half.

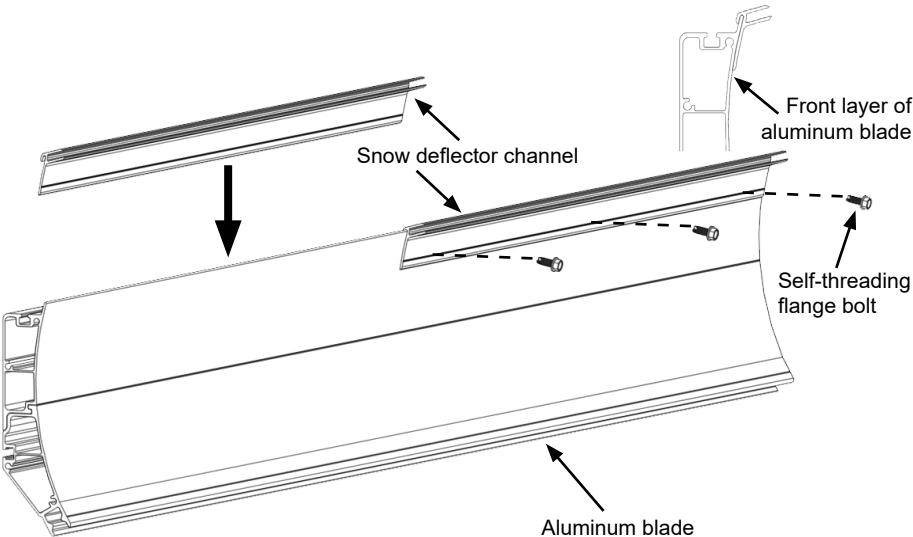

1: ASSEMBLING SNOW DEFLECTOR (Continued)

G. On one side, insert rough edge of rubber into snow deflector channel ensuring rubber is fully inserted.

H. Secure rubber to snow deflector channel with (3) self-drilling Phillips head screws in groove above bolt locations.

I. Repeat for opposite side.

