




# Front Mounted Receiver Installation Instructions Jeep Grand Cherokee

Part Numbers:  
**65008**

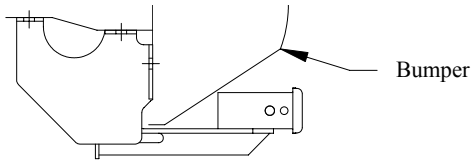

Receiver Shown In Proper Position

**CARGO CAPACITY – DO NOT EXCEED  
300 LB. OR VEHICLE FRONT GROSS  
AXLE WEIGHT RATING. (GAWR)**

9000


LB. MAX. WINCH LINE PULL

**Equipment Required:**

**Fastener Kit: K65008**

**Wrenches: 15mm, 16mm**

**Drill Bits: None**

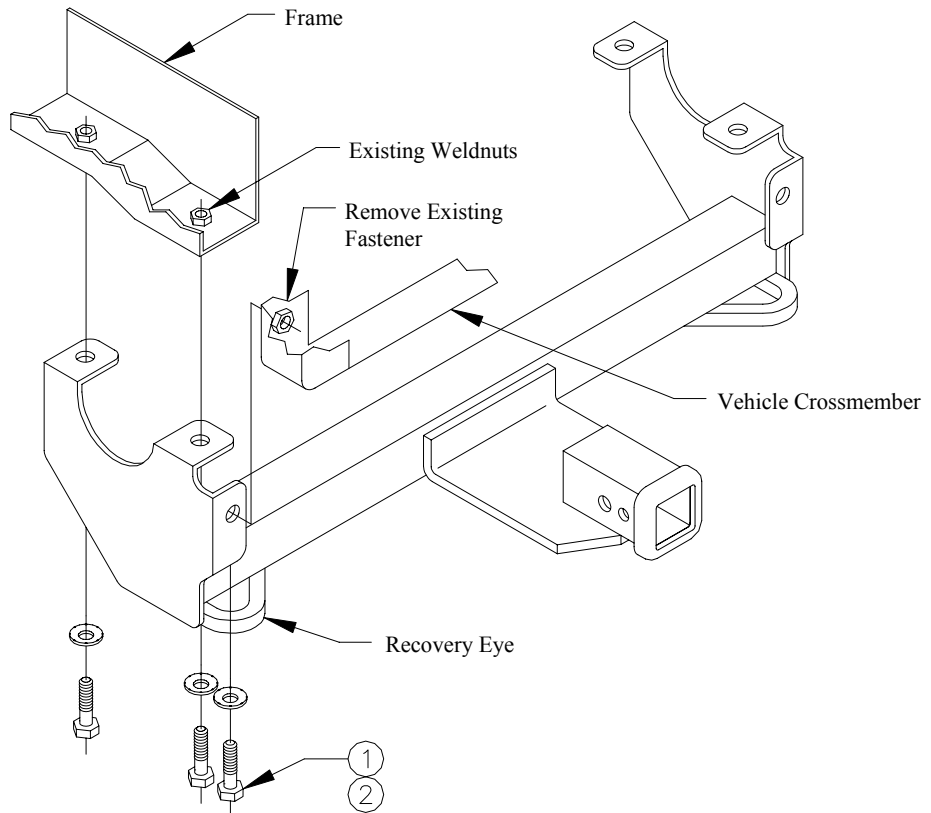

①	Qty. (6)	Hex Bolt, M10 x 1.50 x 30	②	Qty. (6)	Conical Washer, 7/16"
---	----------	---------------------------	---	----------	-----------------------

1. If present, remove steel skid shield and return to vehicle owner. If present, remove plastic underbody panel and return to vehicle owner.
2. Remove the forward attachment bolts in the vehicle crossmember.
3. Raise receiver into position and fasten as shown above.

Tighten all M10 CL8.8 fasteners with torque wrench to 38 Lb.-Ft (52 N-m).