



TRAILSEAL® TAILGATE GASKET

IMPORTANT: The following instructions apply for most truck boxes. Due to varying box designs, your installation may differ.

NOTE: For best adhesion, air and surface temperature should be above 60° F.

A. Clean end of box with soapy water then dry.

B. Cut test piece 1" long and perform one of the following.

Preferred Install: Apply test piece approximately 1/4" below box floor.

Optional Install: Apply test piece approximately 1/4" past box floor.

C. Close tailgate and check for adequate seal. Make adjustments if needed.

D. Remove test piece and save for later.

E. Wipe selected location with included alcohol pad and save for later.

NOTE: Avoid touching clean surfaces and adhesive during installation.

F. Apply gasket to selected location in straight line from side to side. If possible, start and stop at least 1/2" beyond corners.

G. Use saved 1" test piece to assess best location inside of box wall. Close tailgate, check for adequate seal. Make adjustments if needed.

H. Remove test piece and wipe selected location with saved alcohol pad.







I. Apply gasket to selected location from floor up to top of box.

J. Repeat Steps G-I on opposite side.

NOTE: Use excess gasket to fill gaps around tailgate corners.

K. Apply continuous pressure along entire gasket to ensure best adhesion.

TIP: Lubricate gasket with soapy water and close tailgate. Leave tailgate closed for 48 hours. This allows the gasket to conform to the tailgate's shape for a better seal.

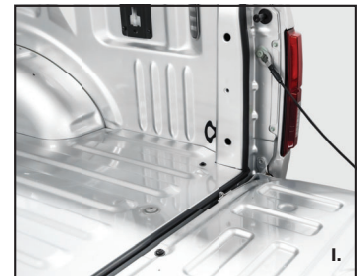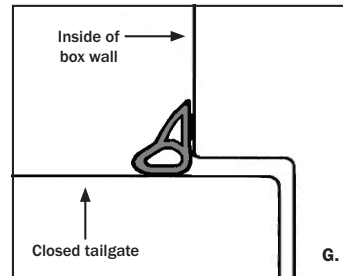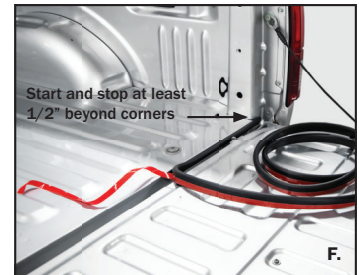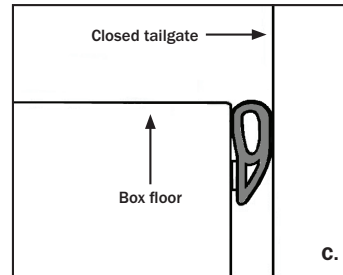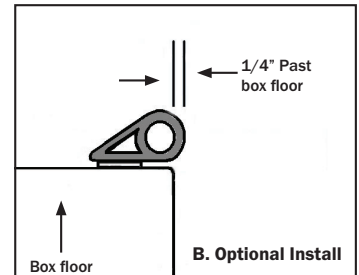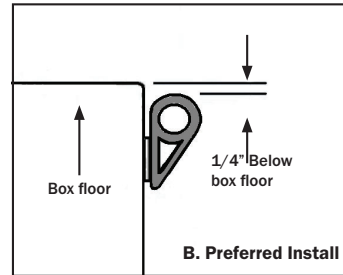

TRAILSEAL.COM



WARNING:

Cancer and Reproductive Harm
www.P65Warnings.ca.gov



8 34532 00158 3

40696_C

Patents: agricover.com/patents.

