

# ROLL UP TRUCK BOX COVER SPECIAL SIDE RAIL CLAMPING INSTRUCTIONS



## 2001-06 FORD EXPLORER SPORT TRAC

Read and follow these special instructions along with the standard instructions carefully before installing or using this cover.

**NOTICE TO INSTALLER:** Even if familiar with product, read special instructions prior to installation as improvements may be made without notice. Always handle components with care. When done, these special instructions must be given to the consumer.

**NOTICE TO CONSUMER:** Before using this product, read special instructions. Save these special instructions for future reference.

**NOTICE TO INSTALLER/CONSUMER:** These instructions supersede the side rail installation step found in the standard instructions. After side rails are installed, resume standard instructions.

# PREPARATION

## TOOLS NEEDED


- (1) 10 mm Socket
- (1) Inch-pound torque wrench
- (1) Protective eyewear

**⚠ CAUTION:** Over torquing hardware may damage components. Do not use impact tools.


## 1. INSTALLING SIDE RAIL

A. This kit contains (4) clamps that attach to factory threaded holes at front and rear of box.

**NOTE:** Small round hole in clamp is not for assembly purposes. Always use elongated hole for bolting.

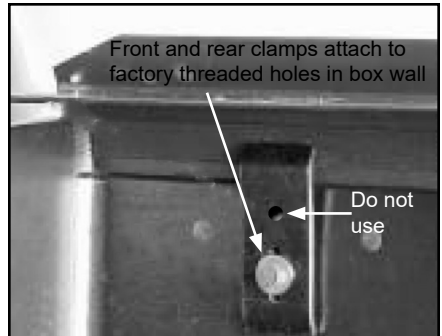

B. Use standard instructions for the correct height and position of side rail. Front of side rail should be flush with top of box. The rear corner edge of side rail is designed to set on top of rail, not on inside edge of box.

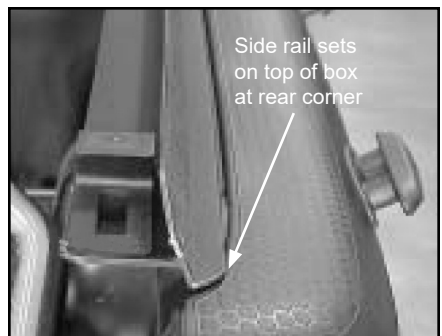

# 1. INSTALLING SIDE RAIL (Continued)

C. At front of box, install clamp with slotted hole in line with existing factory hole in box wall. At rear of box, install rear clamp to existing factory hole in box wall, ensure clamp teeth engage grooves on side rail.

D. Repeat Step 1 to install side rail on opposite side. Torque all clamps to 100 in-lbs.

E. **For remaining cover installation, refer to standard instructions.**

