





SUPPLEMENTAL INSTRUCTIONS FOR CLAMPING ON TOYOTA TUNDRA KIT # 511

ALWAYS USE PROTECTIVE EYEWEAR

1. Position clamp up as high as possible. For best results pull on clamp as you tighten it (SEE BELOW). Make sure rail is flush with top of box and that horizontal leg is level when your done. See Illustration 1

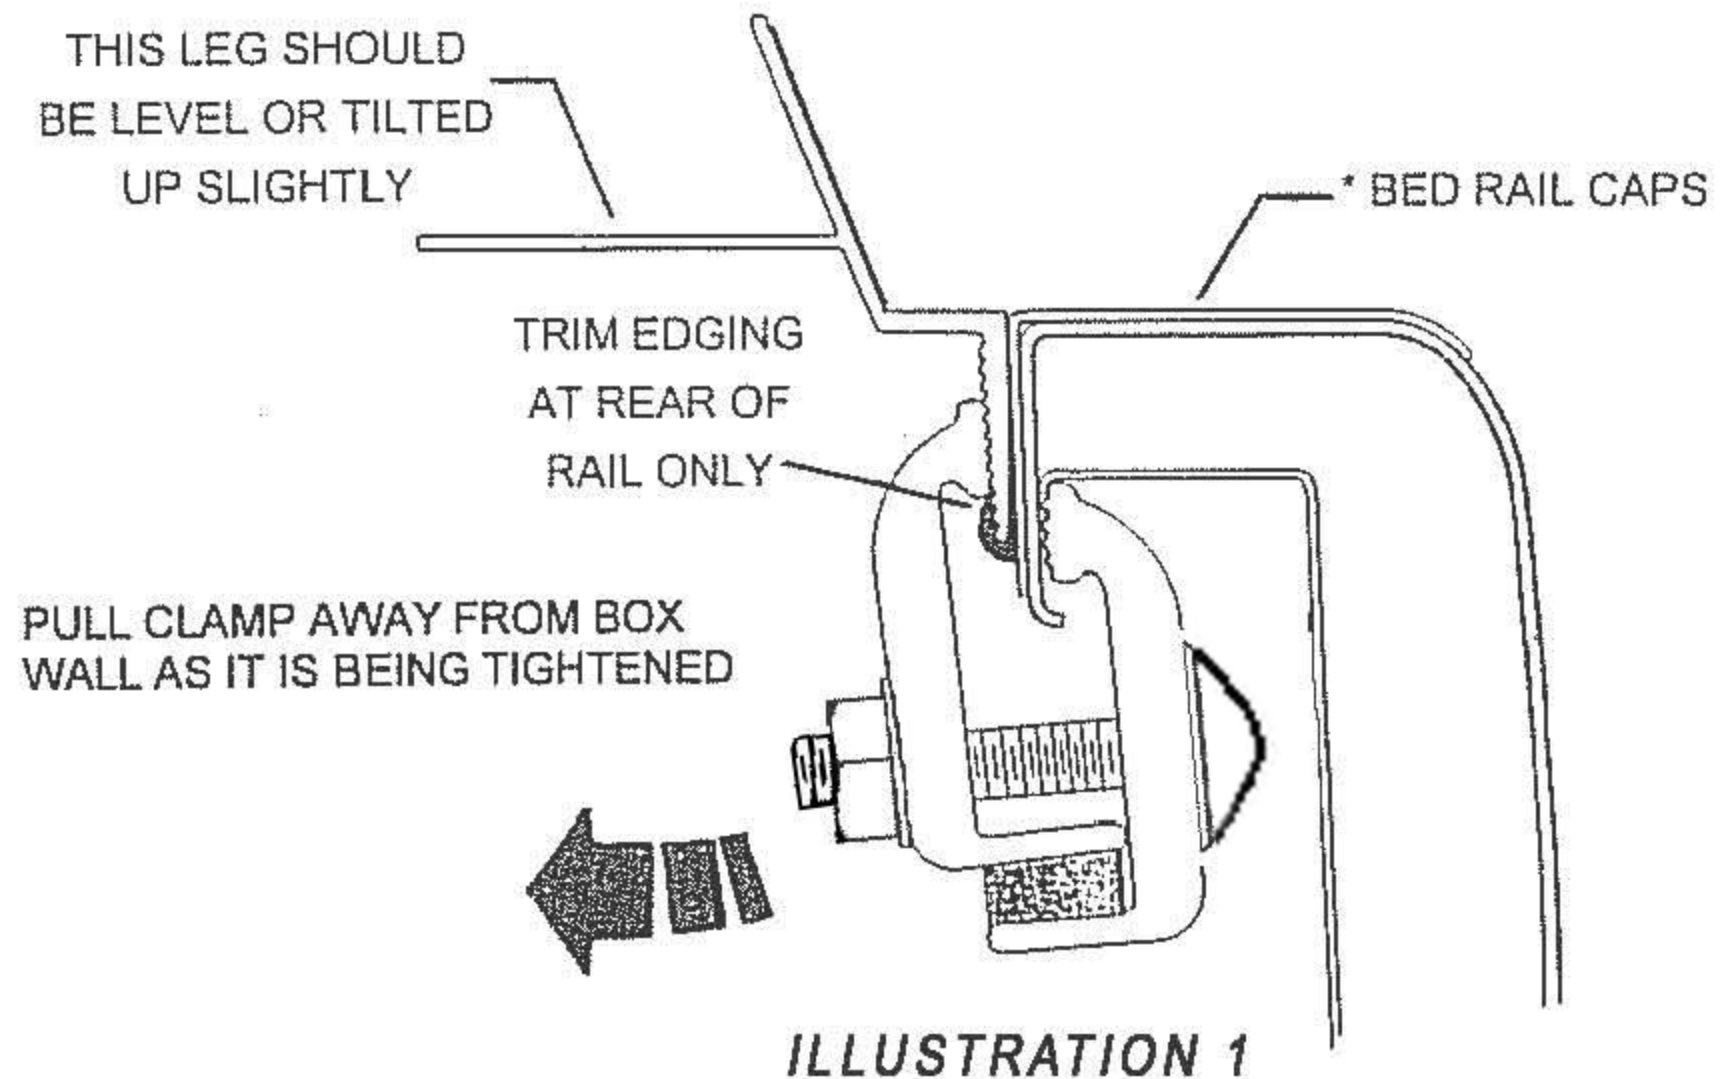

2. At rear of pickup box, hold rail flush with top of tailgate protector. Position a clamp over trim edging, (see both illustrations), and tighten. Repeat same procedure with second clamp. Check both clamps for tightness when done.

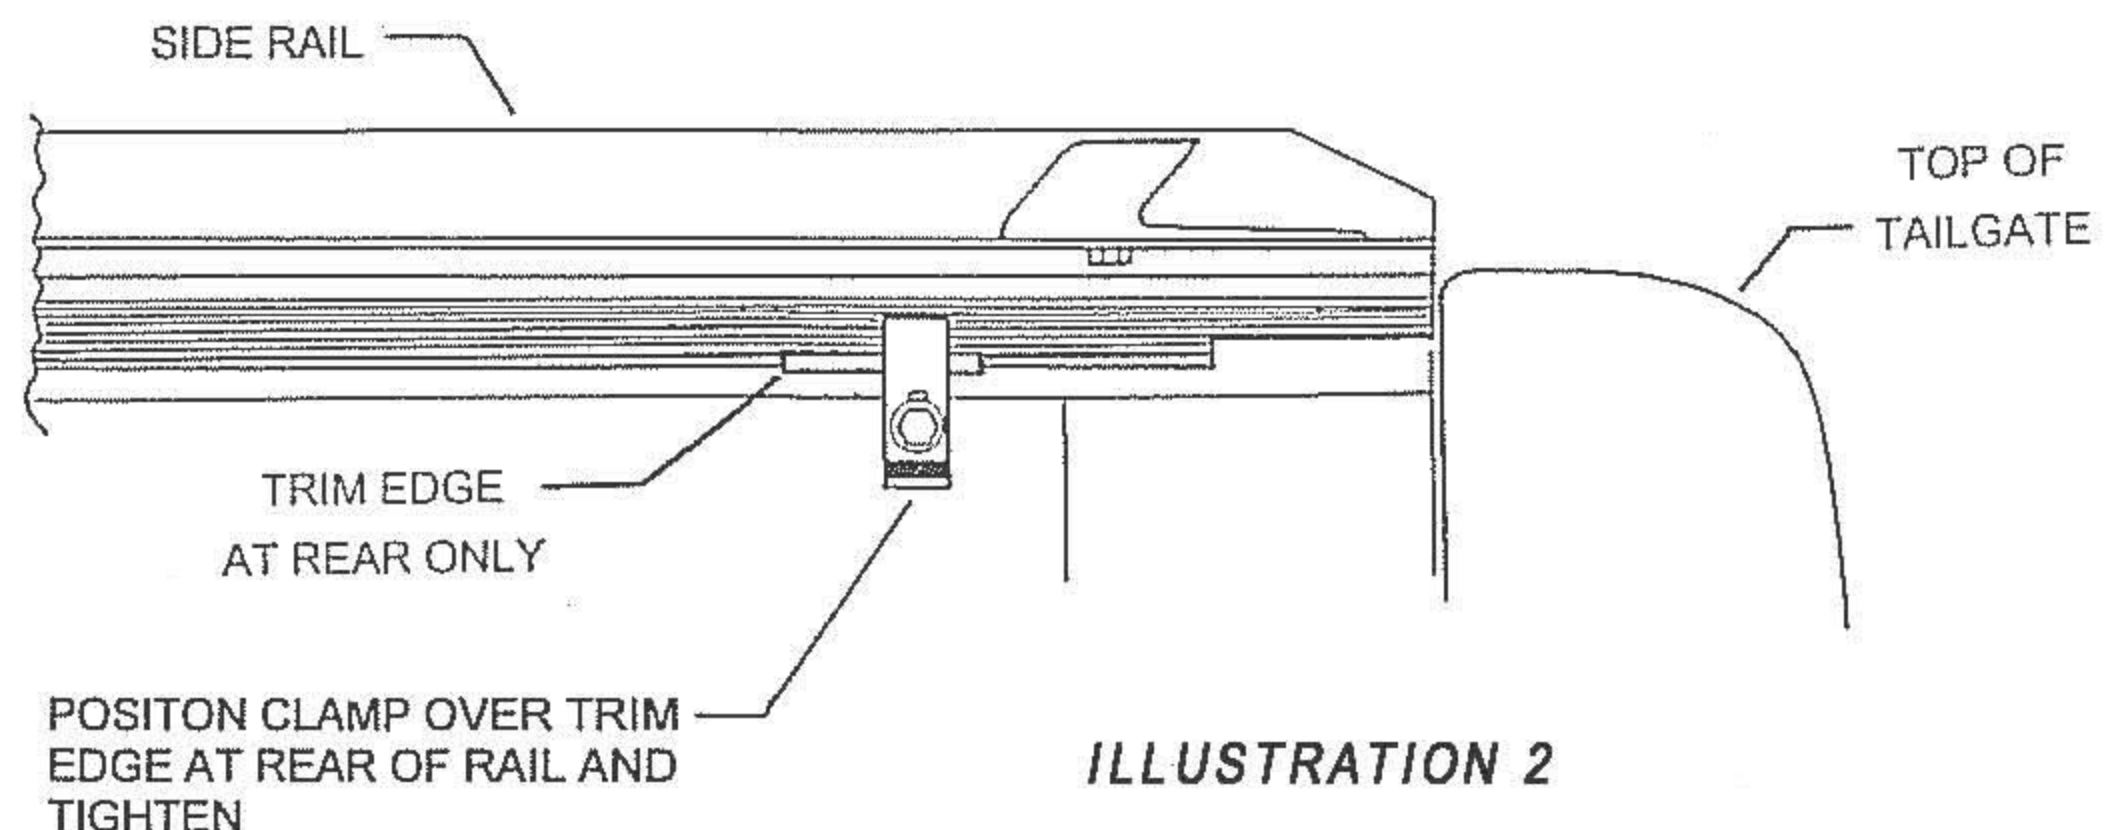

* NOTE: FOR TRUCKS WITHOUT PLASTIC BED RAIL CAPS, YOU MAY NEED TO REMOVE THE TRIM EDGING FROM THE RAIL BEFORE INSTALLING THE 2 REAR CLAMPS