

ROLL UP TRUCK BOX COVER SPECIAL CLAMPING INSTRUCTIONS



2004-ON NISSAN TITAN WITH UTILI-TRACK

Read and follow these special instructions along with the standard instructions carefully before installing or using this cover.

NOTICE TO INSTALLER: Even if familiar with product, read special instructions prior to installation as improvements may be made without notice. Always handle components with care. When done, these special instructions must be given to the consumer.

NOTICE TO CONSUMER: Before using this product, read special instructions. Save these special instructions for future reference.

PREPARATION

NOTE: Use these special instructions if your vehicle is equipped with a Utili-Track system.

TOOLS NEEDED


- Ft-lbs Torque wrench with 1/2" socket
- Protective eyewear
- Spring clamp - optional

⚠ CAUTION: Over torquing hardware may damage components.


NOTE: Hardware appearance and components may vary.

1: CLAMP ASSEMBLY AND MOUNTING

A. Assemble each clamp with halves as illustrated. Ensure long leg of clamp is up.

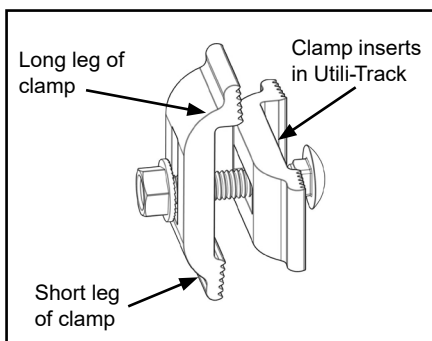

NOTE: For kits with tie down rings, include during clamp assembly.

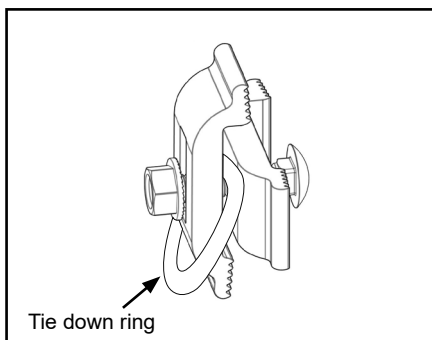

1: CLAMP ASSEMBLY AND MOUNTING (Continued)

B. Insert assembled clamps into Utili-Track and position per standard instructions.

NOTE: OEM Utili-Track bed extender adapter kit (#30298) is available at additional cost.

C. Position side rail per standard instructions and torque all clamps to 20 ft-lbs.

D. Repeat to install side rail on opposite side.

E. **For remaining cover installation, refer to standard instructions.**

