




Installation Instructions

IMPORTANT:

Inspect inside wheel well and box wall for hidden components such as electrical wiring before drilling holes, make adjustments if needed.

Tools Needed:

- 3/8" drill with #3 Phillips bit
- Protective eyewear

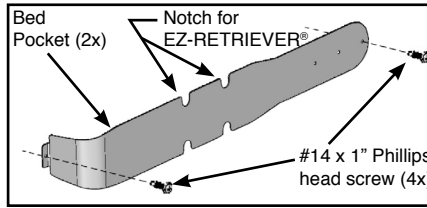

Step 1:

Hold bed pocket in level position against wheel well and box wall by tailgate, make sure there is enough clearance to close tailgate. Run #14 x 1" Phillips self drilling screws through holes in bed pocket into the bed wall by tailgate and into the wheel well. **Do not over tighten.** Repeat procedure on opposite side.

Step 2:


Adhere decal to end of bed pocket, both sides.

NOTE:

On some wheel wells, locating the screw lower down may provide a better fit. Drill a new 1/4" hole in bed pocket where screw will fasten to wheel well.


Drop in bed liner: Drill through bed liner and let screw drill into steel wall behind bed liner.

Bed pockets are notched to work in conjunction with your EZ-RETRIEVER® or EZ-RETRIEVER® II. See below for details. EZ-RETRIEVER® and EZ-RETRIEVER® II are not included with Truck Bed Pocket Kit

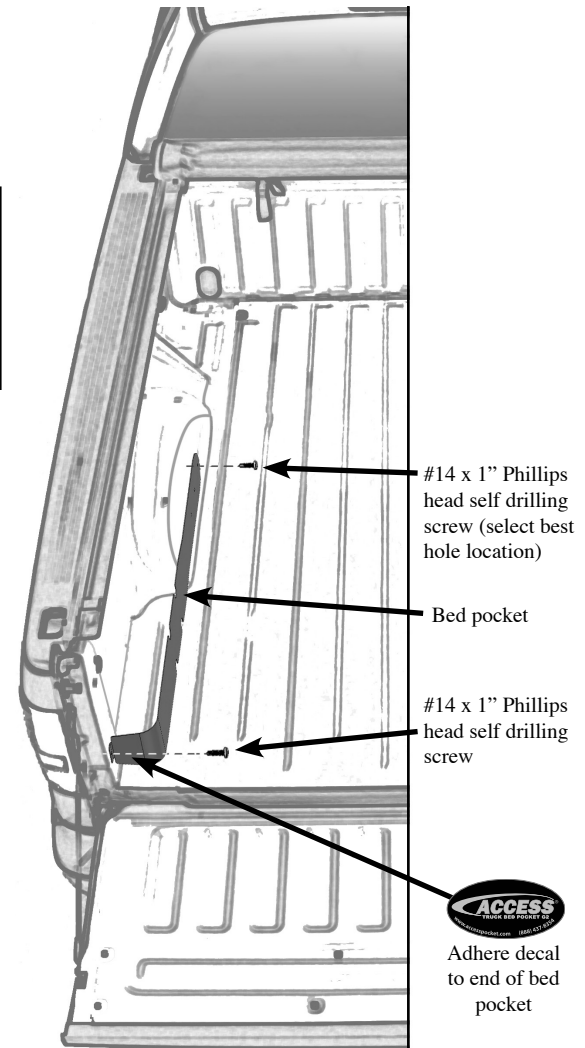

EZ-RETRIEVER® and EZ-RETRIEVER® II
Cargo Reaching Tools are sold separately.
Go online at <http://shop.agricover.com> or call us toll free at 866-630-8726 to order yours today!

P/N 50710 EZ-RETRIEVER®
(adjustable up to 5' 9" long)..... MSRP \$41.95
P/N 70950 EZ-RETRIEVER® II
(non adjustable 5' long)..... MSRP \$19.95

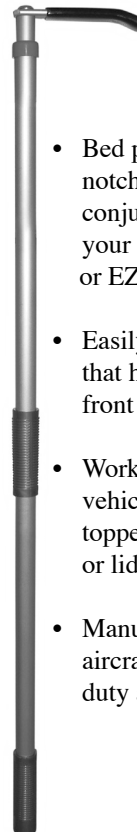

- Bed pockets are notched to work in conjunction with your EZ-RETRIEVER® or EZ-RETRIEVER® II
- Easily reach items that have slid to the front of the truck box
- Works great for vehicles with toppers, tonneaus or lids
- Manufactured from aircraft grade heavy-duty aluminum

GRAB IT, MOVE IT OR LOAD IT



Perfect length for any size truck bed



Instant cargo management at your fingertips.