




# Assembly Instructions

## Tools Needed:

- #2 Phillips screw driver
- Protective eyewear

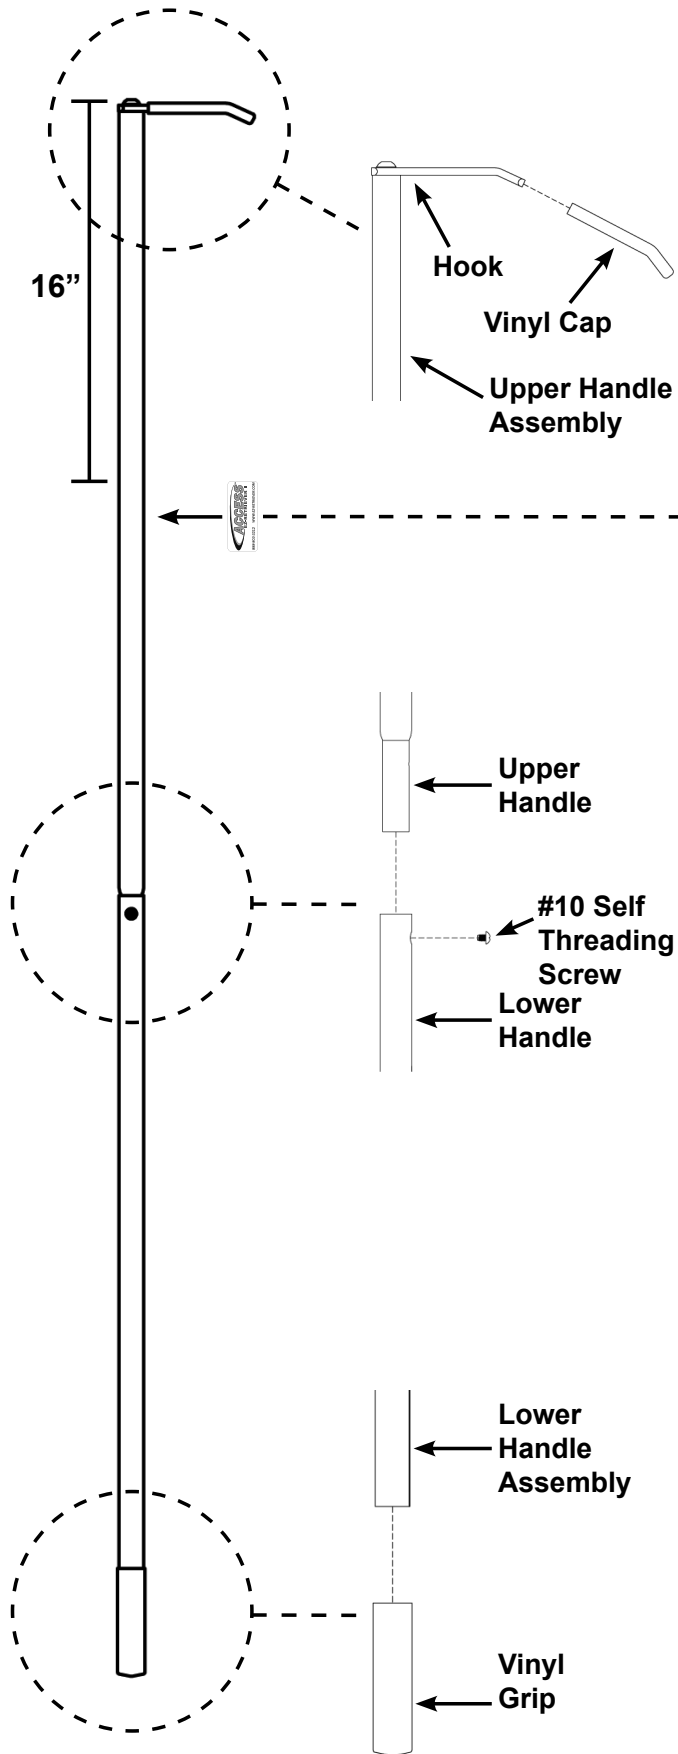

## Step 1:

Slide vinyl cap over hook end of upper handle assembly.

## Step 2:

Place decal onto upper handle assembly 16" from hook.

## Step 3:

Insert upper handle into lower handle, line up pre-drilled holes and secure with self threading screw. Hole on lower handle assembly is oversized to allow screw to sit flush.

**Caution: Over tightening may cause threads to strip**

## Step 4:

Slide vinyl grip on lower handle assembly.