

TOOLBOX EDITION ROLL UP TRUCK BOX COVER SPECIAL BOLT ON HEADER BAR INSTRUCTIONS



2015-ON FORD F-150

Read and follow these special instructions along with the standard instructions carefully before installing or using this cover.

NOTICE TO INSTALLER: Even if familiar with product, read special instructions prior to installation as improvements may be made without notice. Always handle components with care. When done, these special instructions must be given to the consumer.

NOTICE TO CONSUMER: Before using this product, read special instructions. Save these special instructions for future reference.

PREPARATION

IMPORTANT: Toolbox Cover may impede latch operation on some low profile toolboxes.

TOOLS NEEDED

- 5/16" Hex driver or ratchet with 5/16" socket
- Drill with 1/8" drill bit
- Scissors
- Protective eyewear
- Marking pen
- Clamps (optional)

⚠ CAUTION: Over tightening hardware may damage components. Do not use impact tools.


NOTE: Use the following steps instead of Step 1B in the special toolbox instructions if unable to clamp header bar due to truck box structure.

1: INSTALLATION PROCESS

A. Insert molded header bar bracket and rubber header bar bracket into header bar.


NOTE: Rubber header bar bracket should be flush with end of header bar.

B. Repeat to install brackets on opposite side.

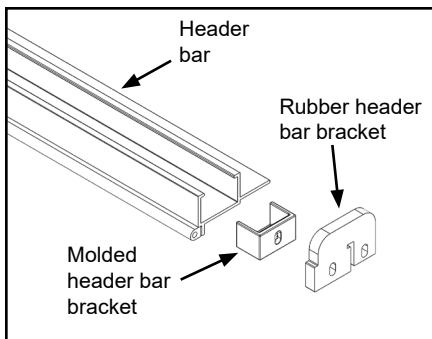


NOTE: For best adhesion, ensure air and surface temperatures are above 60°

C. Adhere seal to header bar and rubber header bar bracket. Trim seal flush with header bar.

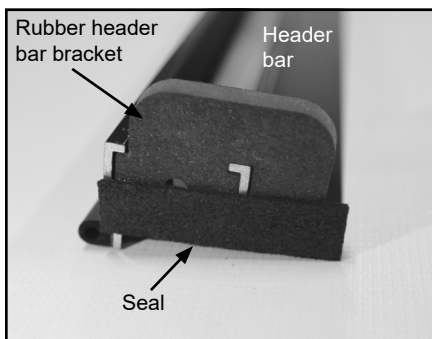

1: INSTALLATION PROCESS (Continued)

D. Align header bar flush with top of box, push tight against toolbox wall while applying enough pressure to compress weather seal against toolbox wall.

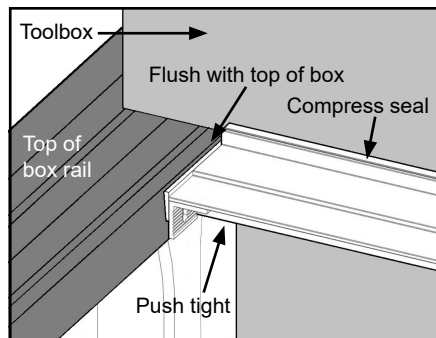

E. Hold or clamp in place and mark box rails at center of holes on each side to allow for adjustment later.



F. At marked locations drill 1/8" holes through box rails, then attach header bar to box rails with (4) 1" self-threading hex bolts; do not tighten yet.



G. Adjust header bar as directed in Step 1D and fully tighten bolts. When header bar installation is complete, proceed to Step 3 of special toolbox instructions.



